

"OSCAR" Menu structure and available commands

| | | | | |
|--------------------|---------------------|--|--|--|
| Menu | | | Equipment settings | |
| | Volume (Phones) | | Headphones volume | |
| | Playlists on CD | | Selection of .m3u list on CD (if available) | |
| | HD-Operation | Hard disk formatting menu. Create and clear directories. | | |
| | | Make Directory | | Create new subdirectory in current directory (press SELECT), Letter selection (turn SELECT) and confirm (press SELECT). Quit operation (SELECT > I s or ENTER) or quit (ESC) |
| | | Remove File/Dir | | Clear current MP3 File or directory. Confirm with SELECT. |
| | | Select Destination | | Select current directory as target directory for copy operations. |
| | | Free space on HD | | Indicates available space on hard disk (in Megabytes). |
| | | Format HD | | Format hard disk. |
| | Modes | | | Selection of playback modes function of SELECT knob |
| | | Play mode | | Selection of playback mode |
| | | | A | All songs |
| | | | D | All songs in current directory |
| | | | S | Single song only |
| | | | P | Play playlist (programme) |
| | | Shuffle & Repeat | | Selection of Shuffle mode |
| | | | N | Normal playback order of tracks in directory, stops at the end |
| | | | S | Shuffle playback |
| | | Wheel mode | | Repeat selection made in playback mode |
| | | | | Function of Select button |
| | | | select | Turn: select next title; Press: start title |
| | | | cue | Turn: fast forward/reverse through track |
| | | speed | Turn: Higher/Lower speed | |
| | Save settings | | Save mode settings | |
| | Create HD Index | | Create Index file, allowing Shuffle mode across entire hard disk. | |
| | Settings | | | Detail settings and rarely used functions |
| | | Set Sleptimer | | OSCAR stops playing after 30, 60 or 90 minutes and initiates spin-down on CD and HD. |
| Scroll mode | | | Switch scrolling of long titles on or off. | |
| Sort mode | | | Control playback order of titles on HD (ON: alphabetical, OFF: file order) | |
| Split mode | | | Hyphenation with long filenames | |
| ID3 Tag mode | | | Display ID3 Tags (ON) or normal filename (OFF) | |
| Autoplay | | | Star playback on power-up. | |
| Save Settings | | Save current settings. | | |
| Program | | | Programming settings | |
| | View Program | | Show title of current programme in memory | |
| | Start Program | | Start current programme | |
| | Resume Program | | Continue paused programme | |
| | Save Program | | Save programme as playlist on HD | |
| | Clear Program | | Clear current programme (playlist) from memory, but not from hard disk | |
| Sound | | | Sound settings | |
| | Bass | | Bass level -5 to +5 (MP3 CDs only) | |
| | Treble | | Treble level -5 to +5 (MP3 CDs only) | |
| | Mute | | Mute (MP3 and Audio) | |
| Information | | | System information | |
| | MPEG Info | | About current track | |
| | Time & Date | | Time and date, also ID number of board | |
| | Set Time & Date | | Real Time Clock setting using Select | |
| | About OSCAR | | About OSCAR, also software version | |
| BIOS | | | Development settings | |
| | Debug | | Select Debug output (for developers only) | |
| | Reset OSCAR | | Software reset | |
| | Flash Update | | Software update (new CD inserted) | |