


**User's Manual of
Laser Engraving Cutting Software
CorelLASER**

Chapter 1 Software installation


1.1 Install steps

Note: please install Coreldraw before installing our software,
Coreldraw 12,X3.X4,X5 are supported; Win XP, Win 7, Win 8 are supported.


- (1) Double-click the CorelLASER.exe under the installation directory, the following dialog box appears:

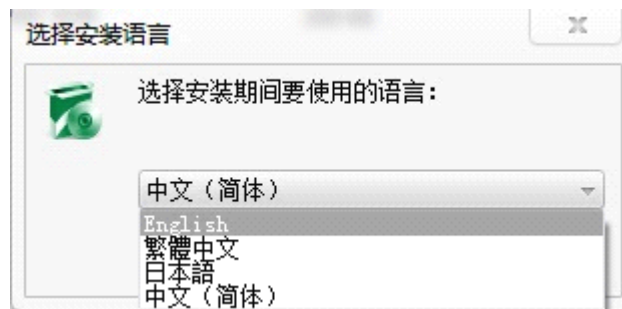


Chose English language ,

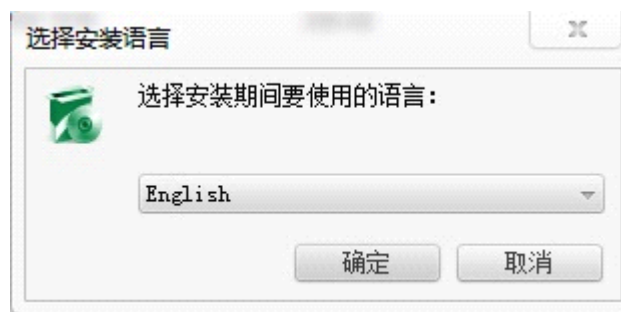

Click Next,

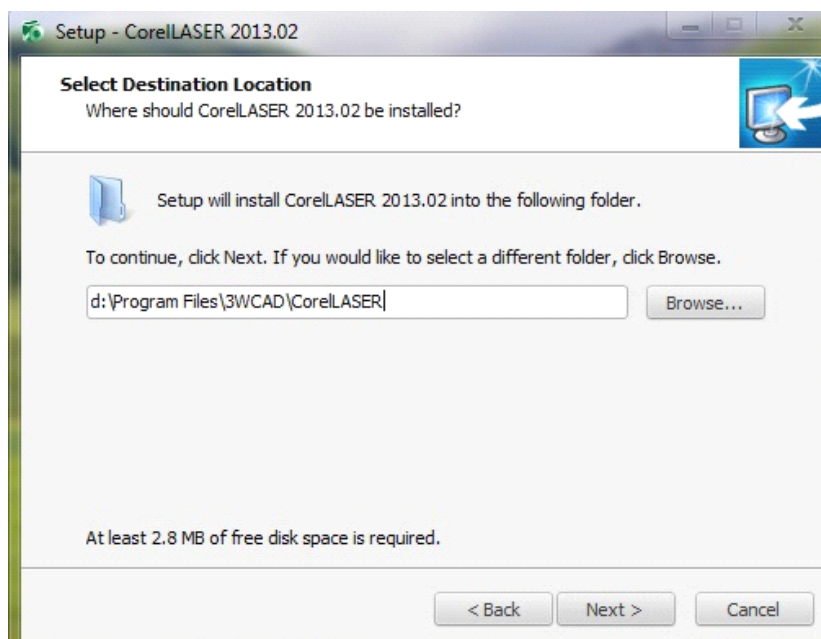


Select the installation path, we suggest d:\Program Files\3WCAD\CoreILASER ,
Then click Next,

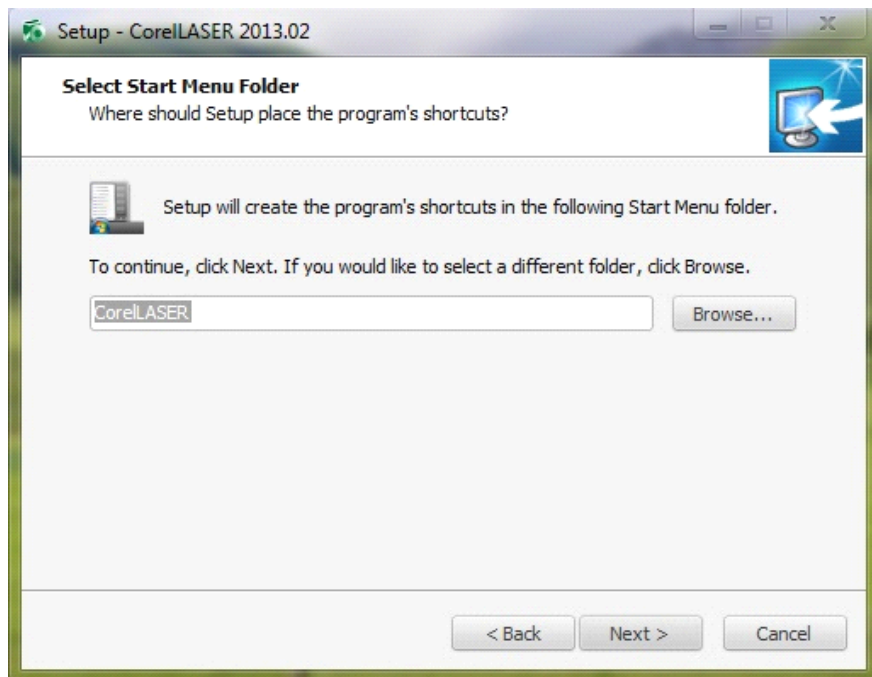

Click Next,



Click Next,

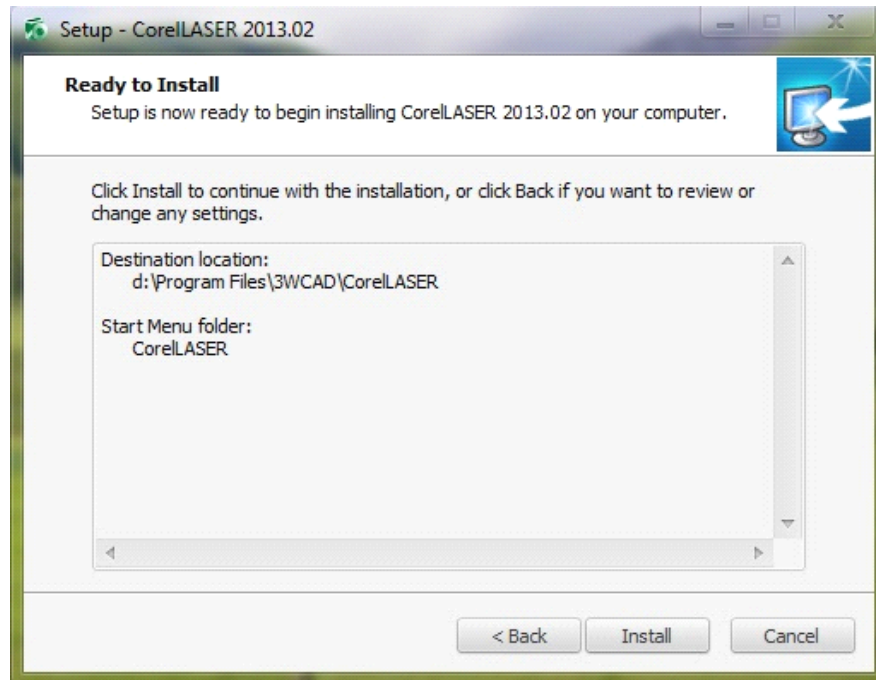


- (2) Click【Install】, when extract copy is to be completed, the installation will be finished,




Click Finish, then the software was installed .

1.2 Engraving machine properties


After the installation ,there will be a icon on your desktop ,as showing :

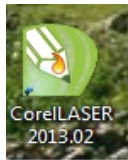

(1) Double click this icon to open the software , it will open Coreldraw , then you can see our software tool bar in Coreldraw ,as showing:

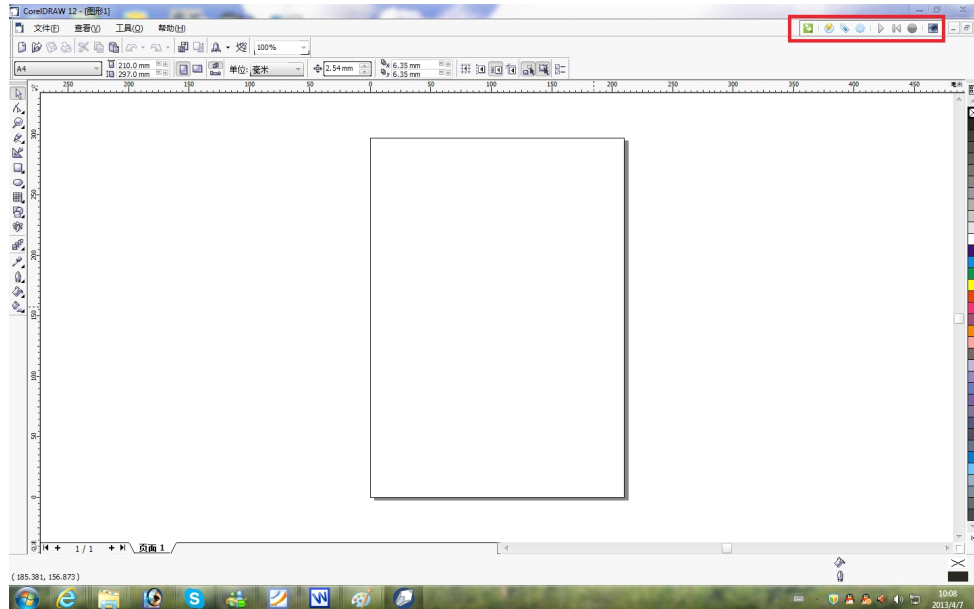

(2) Then click this button  to set Engraving machine properties ,as showing :

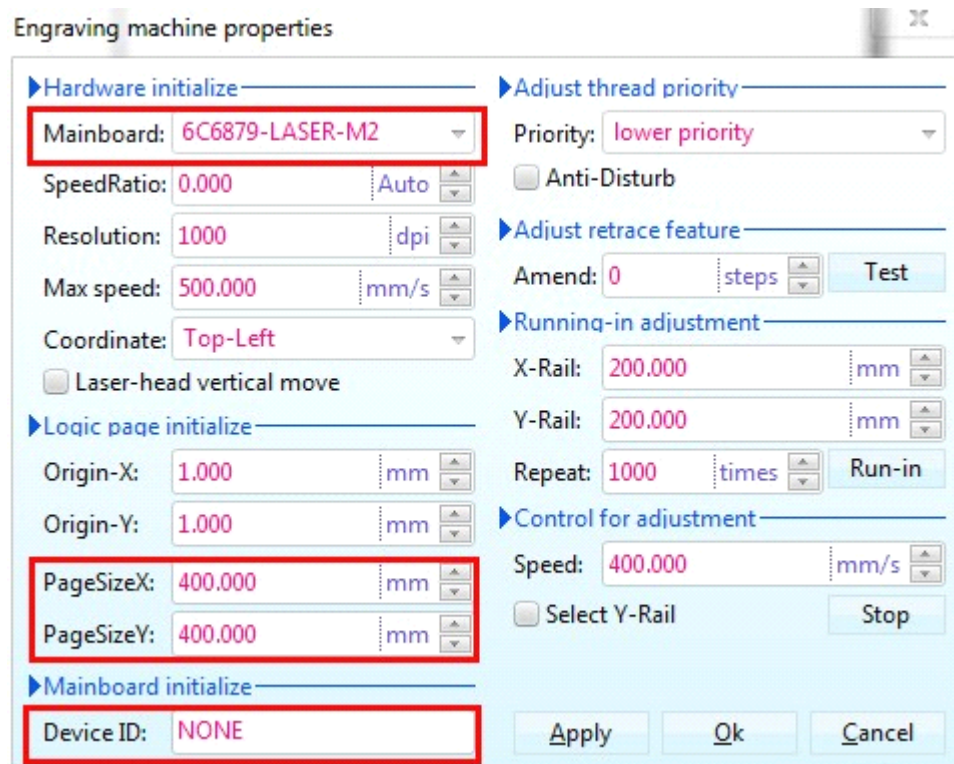

Here we need to set the same setting for Mainboard as the picture above showing , set PageSize according to your machine working area size,then fill the ID on mainboard into the blank of


Device ID, click Apply ,click OK.

Chapter 2 Software instruction

2.1 CorelDRAW Setting



is CorelDRAW setting button, click this button, the pop-up interface is as shown:

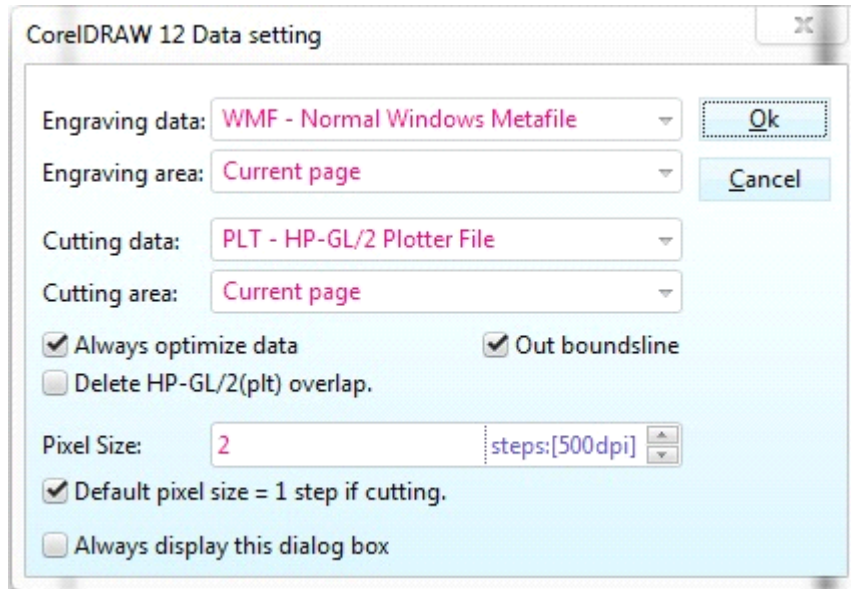





Please set the settings on Data setting interface the same as we did above.


2.2 Engraving



is Engraving button,click this button, the pop-up interface will be as shown:

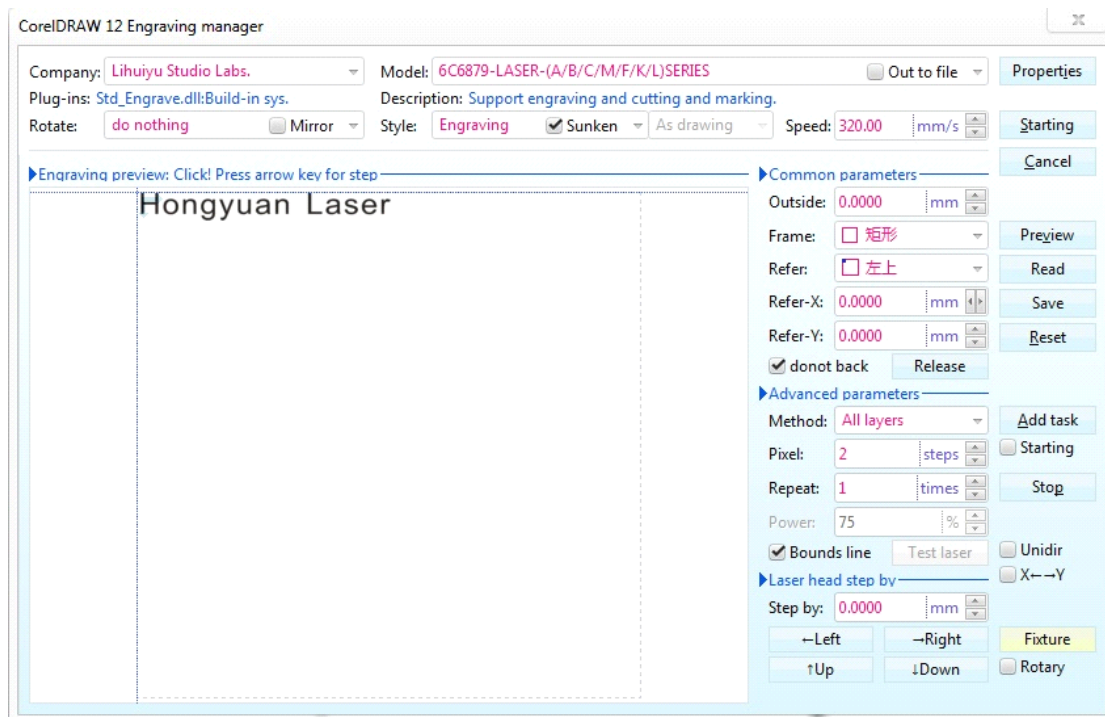

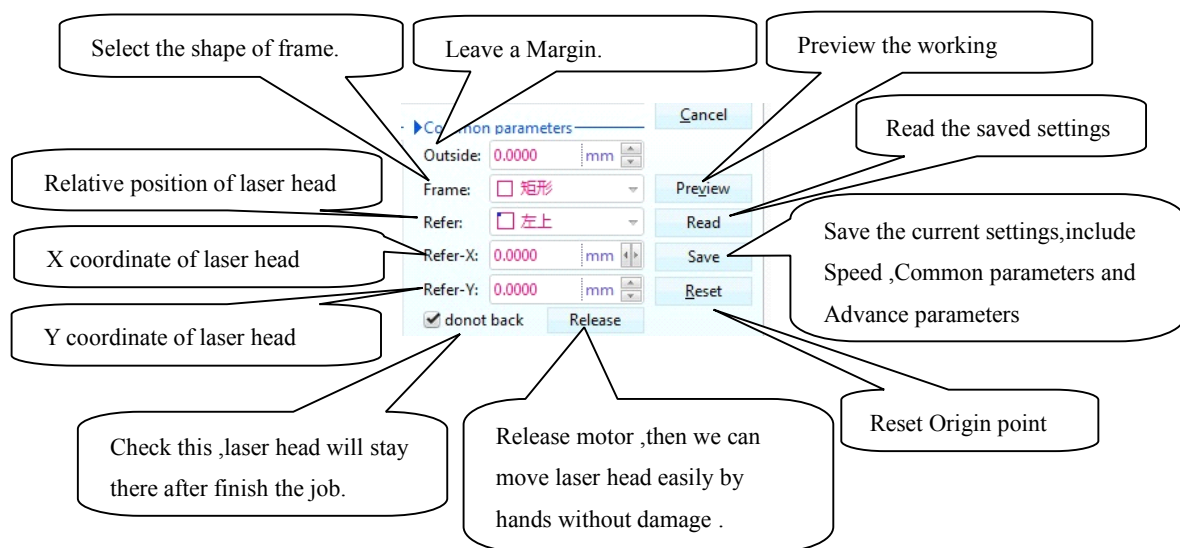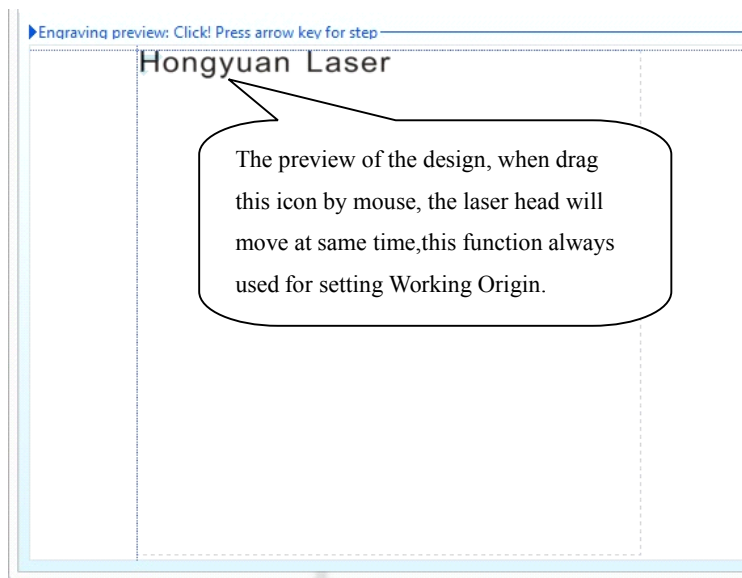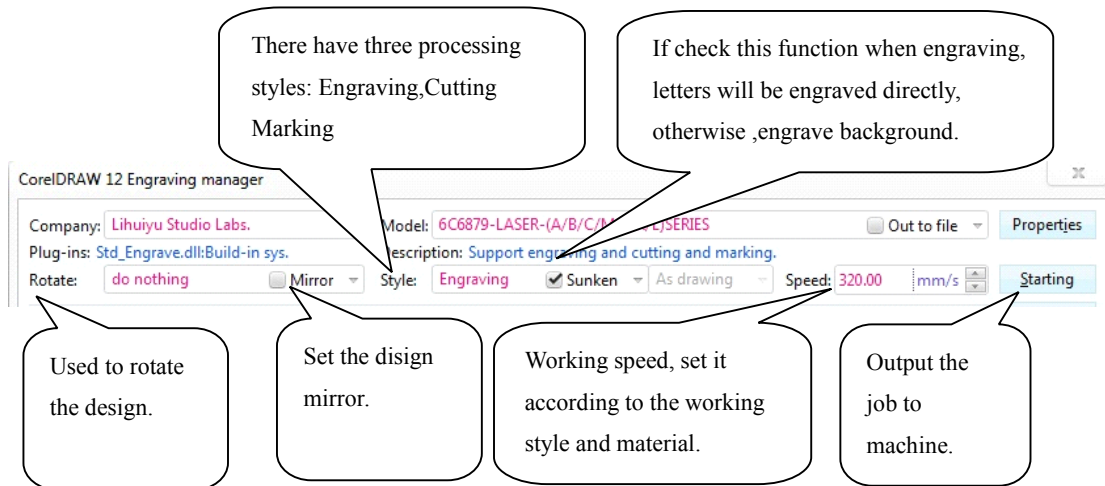

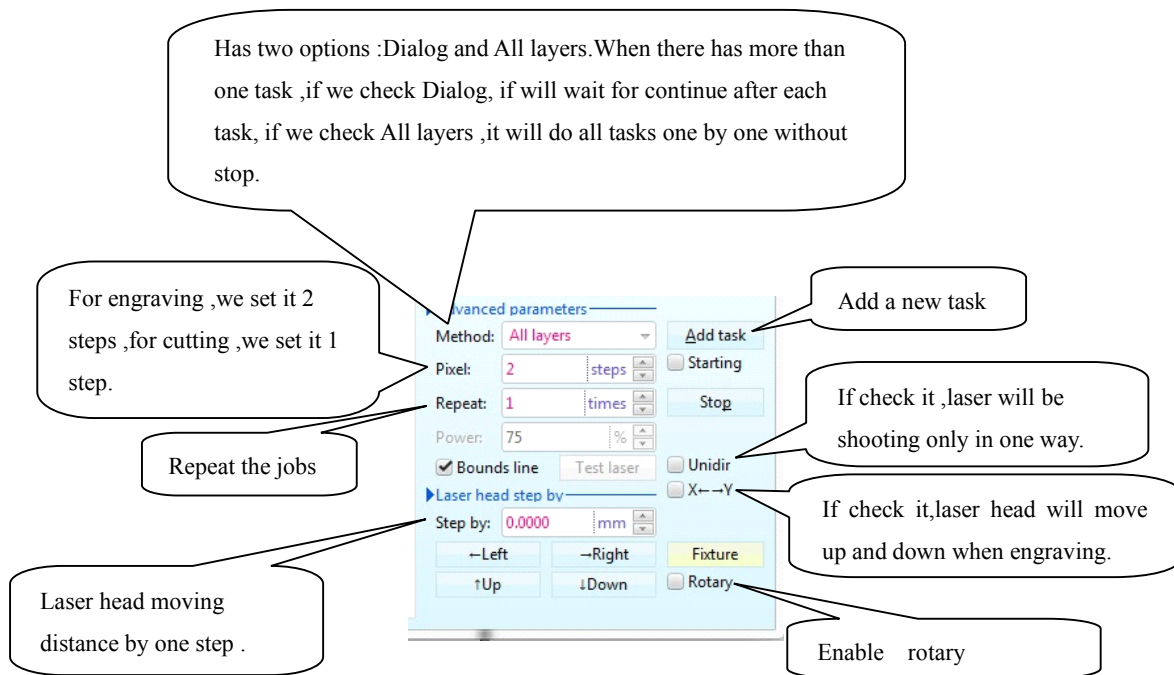

2.3 Cutting



is cutting button, click it the pop-up interface is as shown.

